Intelligent lock usage instructions

TTlock

Product Parameters

How to open the door: APP, Fingerprint, Password, IC Card, Key

Number of fingerprints: 100pcs

Number of passwords: APP sends password (Unlimited) /Custom password(150 Groups)

IC card capacity:100

Product material: Zinc alloy

Power Supply: Four alkaline batteries

Applicable lock body: Single tongue lock body / Double tongue lock body (standard)

Passage Mode: Door lock status, easy to switch

Low battery reminder: Low battery indicator, red light flashing reminder

Patented design: independent design, industrial products made into handicrafts.

Product color: black, nickel, PyD golden


Installation Notes

 
Inrstall the lock body

 
Le'l and right rewersal of lock body


When installing, the lock body, the obligue tonpue should face upward, and the oblique surface of the obligue tongue should face the direction of the front panel. If it does not match, the direction of the oblique tongue should be adjusted, Methods as below:

- 1. Turn the lock body upside down, with the obligue tongue facing down, and let the obligue tongue stop block lean down. As sho'wn in ②
- Press the oblique tongue by hand into the lock body to the end and rotate it 180°.
- 3. Release the oblique tongue, let the oblique tongue pop out along the oblique tongue hole, and reverse the lock body Figure ③

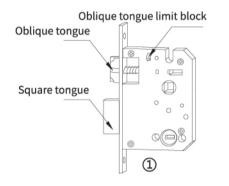





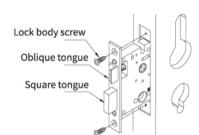

Lock body installation

- 1. Place the oblique tongue up and the oblique side towards the front panel
- 2. Put the lock body into the door slot 3. Fix the upper and lower lock screws

0

 
Door buckle plate, door buckle box installation


- 1. Slot the door frame at the position corresponding to the
- 2.Lock tongue. Put it into the card slot according to the order 3.As shown in the picture. Fix with two lock body screws


Door handle reversing left and right

Open the right door and change the direction: To open the right door, turn the clutch triangle symbol Note: When equipped with a single tongue lock body,

turn the triangle symbol to the R direction to install.



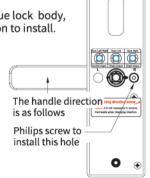

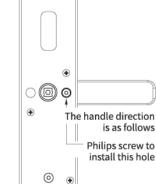

Front panel

0

0


Rear panel


Reversing the direction of the left door: When opening the door on the left, rotate the clutch


triangle symbol to the "50" position. Note: When equipped with a single tongue lock body, turn the triangle symbol to the L direction to install.

Note:

When changing the left and right door handles on the front and rear panels, use a Philips screwdriver to remove the Phillips adjusting screw handle in the panel and rotate it upwards 180°, and install it into another hole with a Phillips screw.

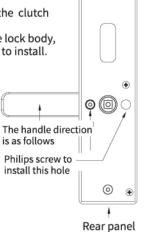

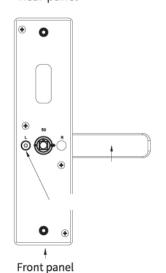

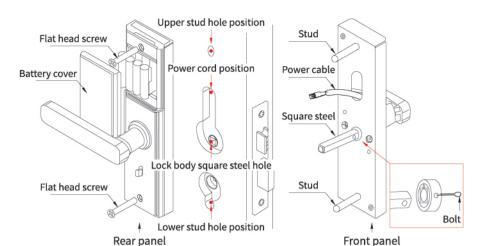

Install the front panel

- 1. First tighten the two studs on the front panel.
- 2. Insert the hole end of the square steel into the square steel hole of the front handle and align it with the two small round holes.
- 3. Pass the pin through the square steel hole, and bend the pin to fx the square steel on the hole.
- 4. Turn the square steel so that the clutch triangle symbol rotates upwards.
- 5. Pass the power cord from the front panel through the hole on the door.
- 6. Pass the upper and lower studs of the front panel through the corresponding holeson the door.
- 7. Pass the square steel through the square steel hole of the lock body.
- 8. Fasten the front panel to the door.

Install the rear panel

- 1. Remove the battery cover from the rear panel.
- Connect the rear panel power cord to the front panel power cord.
- 3.Insert the square steel into the hole of the rear handle.
- 4. Align the upper and lower holes on the rear panel with the positions of the upper and lower studs on the front panel.
- 5. Put two flat head screws into the upper and lower holes of the rear panel, and align them with the front panel studs to tighten.
- 6. Install four batteries and close the battery compartment cover.
- 7. Test the power supply of the door lock, and the installation is complete.

APP Application Download

The software (i0s version) can be downloaded from the APP store, and the Android version can be downloaded from the application store of Google play.





Googie Play

User Registration And Login

User registration:

On the login page, click "Register" in the upper right corner, enter your mobile phone number or email address, set a password and click Register.

- 1.User can use phone number or email for registration which supported 159 countries.
- Verification code will send to phone or email.
- 3. When the registration is successful, it will jump to home page.


User login:


On the login page, enter the account and password, and click "Login"





Add Door LOCK Device

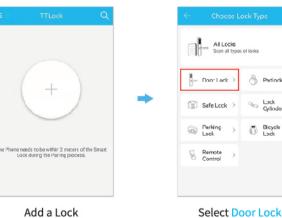

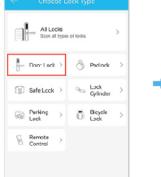



Add a Lock



Select Lock

R XNK3_b32dBe

RNK3_019b/6

NK3_c549/2

R XNK3 e27358


R XNK3_cc1bbc

A

Enter Name

Operation complete


Set Up Fingerprint Unlock

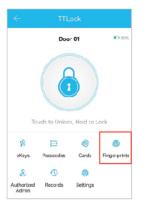

Select on the main page **Fingerprints**



Click Add Fingerprint

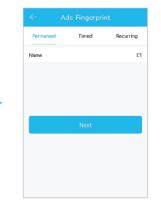


According to the customer's door opening needs Select fingerprint type



Bring your phone close to the door lock device click Start



Follow the prompts to collect fingerprints

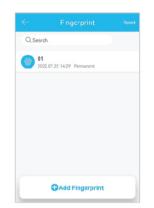

Fingerprint collection completed


Set Password To Ulock



Select on the main page



Select Generate Passcode

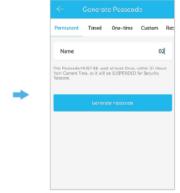

Select the password type according to the use requirements of the door lock

One-time Custom Re

e MUST BE used at least Once, within 24 Hourt Date and Time or it will be SUCPENDED for

Get Timed password

3.Name the password 4.Click Generate Passcode

2.Set Start Time or End Time

Timed One-time Custom Recurring Emse


123456

1.Select Timed




Get Permanent password 1. Select Permanent 2.Name the password


3.Click Generate Passcode

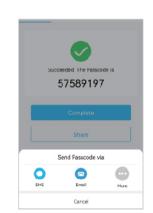

4.Click finish or share to send password

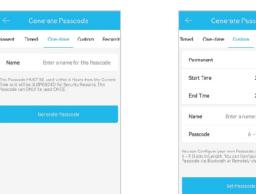

Get One-time password 1.Select One-time 2.Name the password 3.Click Generate Passcode

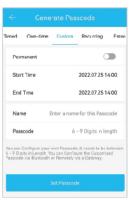

Get Custom password 1.Select Custom

2.Set Start Time or End Time or enable permanent option

3.Name the password

4.Set a 6-digit password 5.Click Generate Passcode



Get Recurring password


- 1.Select Recurri
- 2. Set repeat mode
- 3.Set Start Time or End Tim

- 4.Name the password 5.Click Generate Passcode



Erase password

- 1.Select Erase
- 2.Enter the password on the door lock
- device and clear all passwords

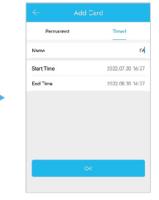

Set to add IC card

1. Select on the main page Cards

Succeeded The Passcode is

83235304


- 2. Click Add Card
- 3.Choose Permanent or time
- 4. Name the password
- 5. Set the effective expiration time
- 6. Click OK
- (When adding, the card needs to be close to the card reading area of the lock)



Add a remote

- 1. Select on the main page Remote
- 2.Click to add remote
- 3. Select remote control type Select Permanent, Timed, Recurring
- 4. Name the remote and click Next
- 5.When the light flashes, click Next 6.Linking device
- 7.Add finished




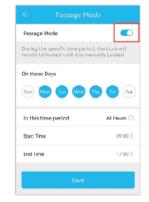

Passage Mode

- 1. Select on the main page Settings
- 2.Choose Passage M
- 3.Open Passage Mode 4.Set opening hours
- 5.Click Save

Restore Factory Settings

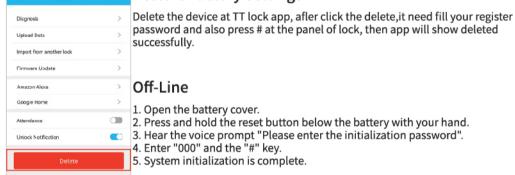

Language support

Language types:

English, Simplified Chinese, Traditional Chinese, Spanish and other 23 languages.

How to Verify Fingerprint Correctly

Gently press your finger on the fingerprint recognition window, keep your finger flat on the center of the fingerprint collection window, do not slide your finger, and release your finger after successful verification.

How to Verify Password Correctly

After entering the correct password, press "#" to hear the prompt sound "di~". The number light on the password keypad lights up, and the password verification is successful. Press the handle to open the door.

Note: In the online state, to unlock the password, you need to press the "#" key to trigger the numeric keypad.